
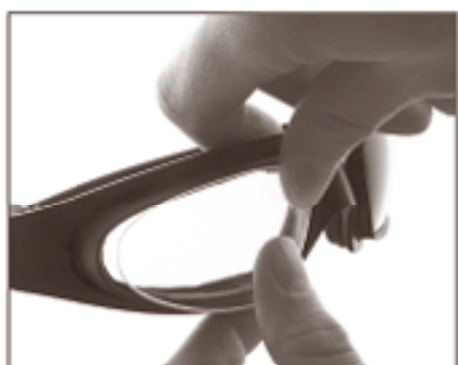


## WIND TINI - WIND TINI PLUS

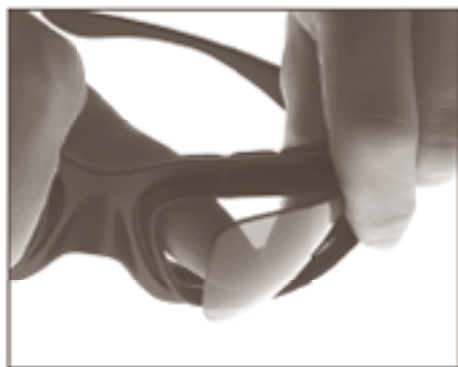

### **INSTRUCTIONS >**

To unhook the ear piece, press gently with your nail on the inside hook and slip out the ear piece.

At this point you can reassemble the glasses either with the kit second ear piece or with the elastic band, just by slightly pressing on the hook. (see photo)

To replace the lenses, press gently on the lens outwards, being careful to enlarge the ocular or eye piece a bit, in order to have it slip out more easily. When you want to put in the new lens, keep the ocular a bit wider and push the lens gently outwards from the side until you can hear a click.