


EASY RIDER - SFERICUM PAD

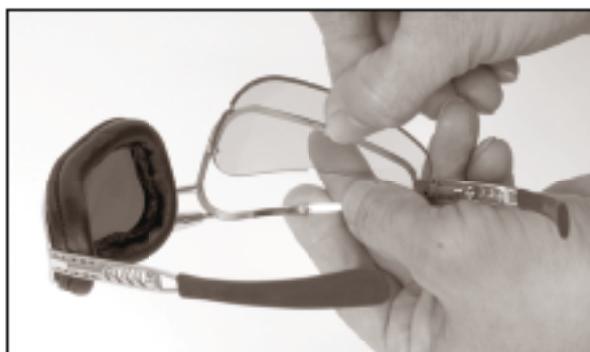

INSTRUCTIONS >

To remove the leather pad that is secured to the frame by means of 3 pivots and a special basket, just push gently outwards.

To remove the lenses, take the glasses by the adjustable bridge and with the Pc round washer push the lens upwards gently and make it slide out; also lever gently near each pivot so that the lens will come out of its proper place.

To adjust the bridge, you only need to turn the nose pad bush clockwise or anticlockwise, depending on whether you want to make the opening wider or narrower; it is recommended to lubricate the mechanism now and then.